




**BrewBuilt™**

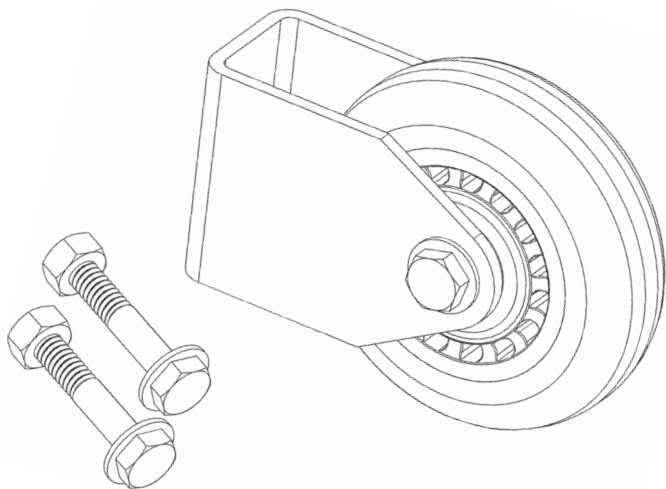

**CASTERS**

# CASTERS:

## Recommended Tools:


7/16" or 11mm Socket Wrench, and 7/16" or 11mm Combination Wrench.




BrewBuilt™

- ① Open package and ensure that you have all required parts. Your package should have included:

- a 2x Caster Assembly, with pre-installed bolts.
- b One flat washer and one lock washer.

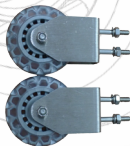

- ② Locate the mounting holes on the bottom of the legs of the burner. Note that the casters can mount to either the left or right side of the frame.

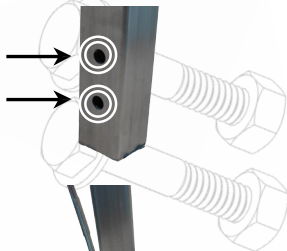

- ③ Remove any pre-installed nuts & washers from the mounting bolts.

- ④ Install the mounting bolts through the frame legs. slide the lock washers onto the bolts, and thread the nuts on to hand-tightness.



- ⑤ Use the Combination Wrench to hold the bolt heads in place inside the Caster Bracket and tighten down the nuts with the Socket Wrench.

- ⑥ Repeat with the second caster.

