




BrewBuilt™

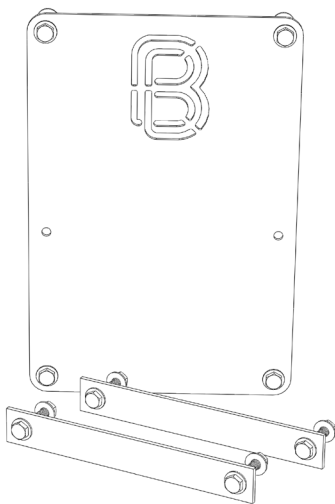

CONNECTING KIT

CONNECTING KIT

Recommended Tools:

7/16" or 11mm Socket Wrench, and 7/16" or 11mm Combination Wrench.



BrewBuilt™

- ① Open package and ensure that you have all required parts. Your package should have included:

- Ⓐ Small Rear Stainless Bridge (x2)
- Ⓑ Large Front Connecting Plate
- Ⓒ Hardware Set, including 8x Mounting Bolt, 8x Lock Washer, 8x Flat Washer, 8x Nut



- ② Locate the mounting holes on the legs of the burner. The Front Connecting Plate will mount to the front legs with 4 bolts, one in each corner. The rear bridges will mount to the upper and lower set of holes on the back legs.

- ③ You can mount the Front Plate and the Rear Bridges either inside or outside the frame legs, as you prefer. We think the system looks the best with the Front Plate on the outside and the Rear Bridges on the inside.

- ④ Install the mounting bolts from the outside with the Flat Washer up against the bolt head and the Lock Washer up against the nut. Install all the bolts loosely to help you get them all in place, then tighten them by hand.

- ⑤ Use the Combination Wrench to hold the Nuts in place on the inside of the frame, and tighten down the bolts with the Socket Wrench.

