


Brewmaster
SINCE • 1971

OxyWand™ Oxygenation System

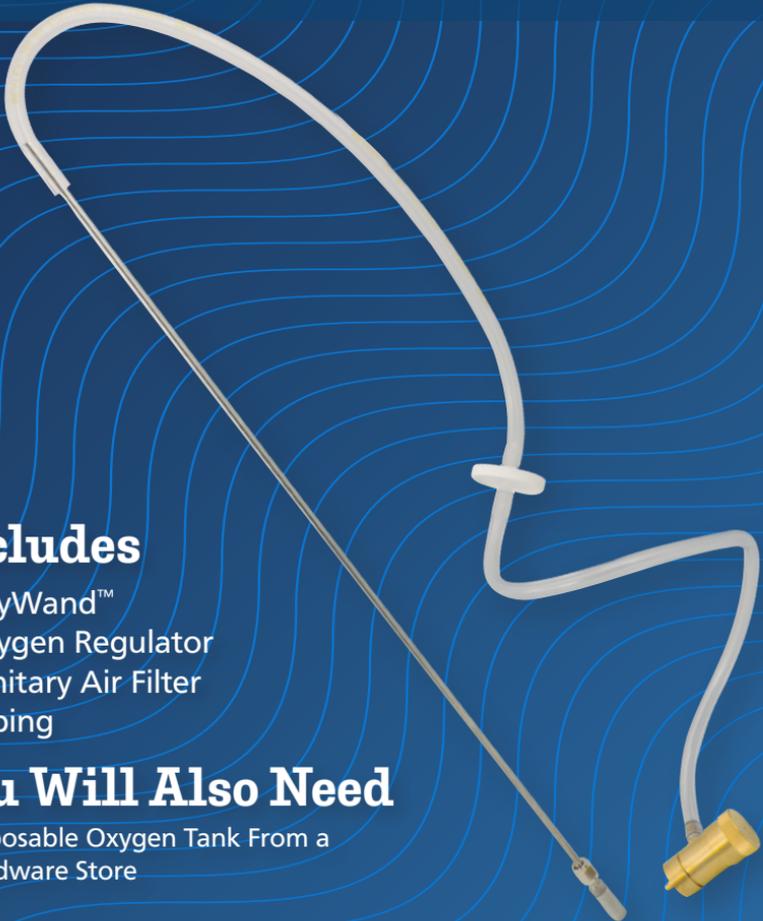

Includes

- OxyWand™
- Oxygen Regulator
- Sanitary Air Filter
- Tubing

You Will Also Need

- Disposable Oxygen Tank From a Hardware Store

Instructions For Use

- 1 Sanitize the OxyWand™ and tube. (See below for details)
- 2 Insert OxyWand™ down to the bottom of the fermenter.
- 3 Turn the knob on top of the regulator until you see bubbles coming from the stone.
- 4 Total time of oxygenation should be 1 minute for worts under 1.065 and 2 minutes for 1.065 and over. Remove your OxyWand™ and install an airlock.
- 5 Clean and sanitize your OxyWand™ and store in a clean dry location.

Cleaning & Sanitizing

IMPORTANT: DO NOT touch the stone with your bare hands, the oils from your skin can clog the stone.

There are many effective methods for cleaning and sanitizing air stones. Prior to use, we recommend boiling the stone for 2 minutes then insert into your sanitizing solution. After use insert the stone back into your bucket of sanitizer and blow oxygen through for 5–10 seconds. Remove the stone and store dry.